

# User Manual

## ORION Hypnoray

[ORFX5]

### Introduction

With 64 power efficient red, blue and green LEDs, the ORFX5 is a cost effective, easy to operate lighting effect suitable for a wide variety of recreational and home uses.


### Warnings

- For indoor use only
- Caustic chemicals or liquids can cause damage to the housing.
- Operating temperature: < 40°C.
- Do not disassemble the fixture yourself. Please consult a qualified technician for service and repair.

### Specifications

- Power supply: AC120V 60Hz
- Power : 20 W
- Light source: 64 red, green, blue, white LEDs.
- Operating modes: AUTO, AUDIO, TEST
- Dimensions: 434 x 289 x 205mm
- Weight: 3.8 KG

### Back Panel

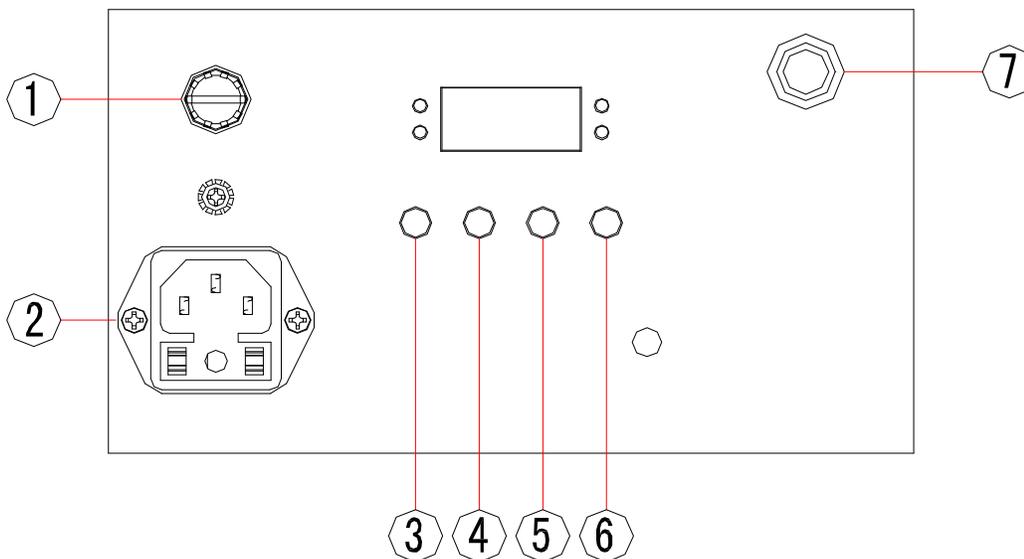

1-Sensitivity 2-Power 3-MENU 4-UP 5-DOWN 6-ENTER 7-Mic

## Power-on reset

The system will be reset when powered on, and return to the operating mode it was in prior to shutdown. If no buttons are pushed for 10 seconds, it will return to main MENU. After 20 seconds the display will dim.

## Modes of Operation


Press MENU to toggle between operating modes (Auto, Audio, or Test). When the desired mode appears in the display, press ENTER to select.

### Auto Mode

Press the MENU button until [A.U.T.O.] appears in the display. Press ENTER to select. Once in AUTO mode, press the MENU button to toggle between mode parameters:

1. **Program:** program #01-09
2. **Speed:** program speed #01-10 (slowest to fastest)
3. **Strobe:** strobe time #00-10 (slowest to fastest, 0=no strobe)

Press UP or DOWN to toggle between mode parameter values.  
Press ENTER to select value.

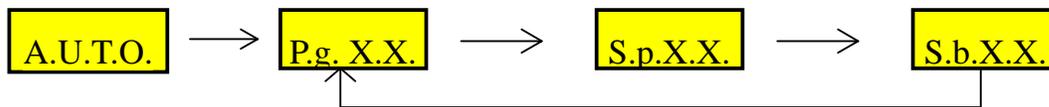


### Audio Mode

Press the MENU button until [S.O.N.D.] appears in the display. Press ENTER to select. Once in AUDIO mode, press the MENU button to toggle between mode parameters:

1. Program: select program #01-09
2. Strobe: select strobe time #00-10 (slowest to fastest, 0=no strobe)

Press UP or DOWN to toggle between mode parameter values.  
Press ENTER to select value.

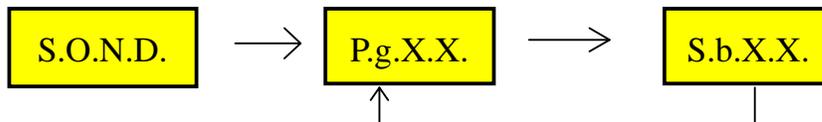

### Test Mode

Press the MENU button until [T.E.S.T.] appears in the display. Press ENTER to select. Once in TEST mode, press the MENU button to toggle between mode parameters.

Press UP or DOWN to toggle between mode parameter values.  
Press ENTER to select value.

